# Arming

Select the Arming tab of the Virtual Keypad to access the arming/disarming options for your system. Your system has been programmed to operate in one of four configurations: Area, All/Perimeter, Home/Away, or Home/Sleep/Away.

## **Area Systems**

Your system may be divided into separate areas for burglary protection. Each area will have a custom name and can be turned on or off independently of other areas.

OUR OGO		rjones123@mail.co
IERE	HI 70 LO 45 HI 55 LO 39	XT50
rming Users	Schedules Automation Video	History
Area Arming		
		A
Area Name	Armed Status	Arm All
PERIMETER	DISARMED	Arm
INTERIOR	DISARMED	Arm
BEDROOMS	DISARMED	Arm
٠		• • • • • • • • • • • • • • • • • • •
4 Hour History		
Wednesday April 2, 2014		
The Jones's Alarm System h Message Sent at: 3:30 PM	as a Bypass on the Front Door.	
User 20 has checked in at Message sent at: 3:38 PM	he Jones's Alarm System.	
Tuesday April 1, 2014		
The Jones's Alarm System h Message sent at: 9:52 AM	as Trouble on the Front Door.	
The Jones's Alarm System h	as a Low Battery.	

# Arm Area

Click the Arm button for the area(s) you wish to arm. When armed, the shield for that area displays blue with its Armed status. To arm all areas click Arm All. Access to areas may be limited through the users authority level in User Codes. When a user attempts to arm an unauthorized area, an error message is displayed.

OUR	0	63	>		rjones123@mail.co
IERE		HI70 LO 45	HI 55 LO 39		XT50
rming Users	Schedules	Automation	Video	History	
System Arming El Area Arming	rror Error:"Not authorized for	some areas. Some areas r	nay have been arme	ed, some were not."	×
Area Name		Armed Status		Arm All	Disarm All
PERIMETER		ARMED			Disarm
INTERIOR		DISARMED			Arm
BEDROOMS		DISARMED			Arm
<ul> <li>Hour History</li> <li>Wednesday, Antil 2, 20</li> </ul>	114				* }
The Jones's Alarm S Message Sent at: 3:	ystem has a Bypass on 30 PM	the Front Door.			
User 20 has checked Message sent at: 3:	1 in at the Jones's Alarn 38 PM	1 System.			
Tuesday April 1, 2014					
The Jones's Alarm S Message sent at: 9:	ystem has Trouble on th 52 AM	e Front Door.			
The lones's Alarm S	vstem has a Low Battery				

## **Faulted Zones**

If there are any faulted zones encountered during the arming process, an Alert Message is displayed listing the faulted zone(s) and options for Okay, Bypass or Stop.

Click **OKAY** to force arm the faulted zone.

Click **BYPASS** to bypass all faulted zones.

Click **STOP** to stop the system from arming. Correct the zone problem(s) and click the arming button again.

You may force arm or bypass any faulted zones. A zone that is force armed is restored into the system if it later returns to normal. A zone that is bypassed remains bypassed until the system is disarmed.

When armed, the shield for that area displays blue with its armed status.



## **Disarm Area**

Click the Disarm button for the areas you wish to disarm. To disarm all areas, click the Disarm All button. When disarmed, the shield displays blank with the Disarmed status.

OUR OGO	0	63 ♀			rjones123@mail.com	
IERE		HI 70 LO 45	HI 55 LO 39		XT	50
r <b>ming</b> Users	Schedules	Automation	Video	History		
Area Arming						
Area Name		Armed Status		Arm	All Disarm All	^
PERIMETER		C ARMED			Disarm	
INTERIOR		DISARMED			Arm	
BEDROOMS		ARMED			Disarm	
<					Þ	Ŧ
Wednesday April 2, 20	114					
The Jones's Alarm S Message Sent at: 3:	ystem has a Bypass on 30 PM	the Front Door.				
User 20 has checked Message sent at: 3:	l in at the Jones's Alar 38 PM	n System.				
Tuesday April 1, 2014						
The Jones's Alarm S Message sent at: 9:	ystem has Trouble on ti 52 AM	ne Front Door.				
The Jones's Alarm S	vstem has a Low Batter	v.				

When a user attempts to disarm an unauthorized area, an error message is displayed.

HI70 LO 45 HI 55	eo History	XT50
s Automation Vide	eo History	
sarm"		×
Armed Status	Arm Ali Disarm Al	
C ARMED	Disarm	
DISARMED	Arm	
DISARMED	Arm	
		-
s on the Front Door.		
Alarm System.		
on the Front Door.		
	Armed Status  Armed Status  ARMED  DISARMED  DISARMED  s on the Front Door.  Alarm System.  on the Front Door.	Armed Status Arm All Disarm A          Armed Status       Arm All       Disarm A         Image: Disarmed Status       Image: Disarmed Status       Arm         Image: Disarmed Status

# **All/Perimeter Systems**

Your burglary protection is divided into two areas:

 Perimeter and Interior - All arming arms both the Perimeter and the Interior of the system when leaving the building and no one is inside. Perimeter arming arms the exterior doors and windows and allows you to move freely about inside without setting off any interior alarms.

## Arm All

Click the Arm All button. When armed, the shield displays blue with the Armed status and the All icon in the center.



## **Disarm All**

Click the Disarm button. When disarmed, the shield displays blank with the Disarmed status, the Perimeter and Arm All buttons.



#### **Arm Perimeter**

Click the Arm Perimeter button. When armed the shield displays blue with the Armed status and the Perimeter icon in the center.

#### **Disarm Perimeter**

Click the Disarm button. When disarmed the shield displays blank with the Disarmed status, the Arm Perimeter and Arm All buttons



## **Home/Away Systems**

Your burglary protection is divided into two areas:

 Perimeter and Interior - All arming arms both the Perimeter and the Interior of the system when leaving the building and no one is inside. Perimeter arming arms the exterior doors and windows and allows you to move freely about inside without setting off any interior alarms.

### **Arm Home**

Click the Arm Home button to select. When armed, the shield displays blue with the Armed status and the Home icon in the center. When Home is armed you may choose Arm Away without disarming Home. When Away is selected Disarm is the only option displayed



#### Arm Away

Click the Arm Away button to select. When armed, the shield displays blue with the Armed status and the Away icon in the center.

Virtual Keypad App Help Guide - Arming



#### **Disarm Home/Away**

Click Disarm for the option you wish to disarm. When disarmed, the shield displays blank with the Disarmed status and the Arm Home and Arm Away buttons.

3/25/2015

Virtual Keypad App Help Guide - Arming



# Home/Sleep/Away Systems

Your burglary protection is divided into three areas. Tapping the shield in the middle of the screen will display the following options.

## Home

**HOME** arming is for when you are staying inside but want the comfort of knowing the exterior doors and windows are armed.



## Sleep SLEEP arms all areas except those near bedrooms and night time areas.



## Away

AWAY arms all three areas for when you leave the building and no one is left inside.



**Disarm DISARM** disarms the system. Virtual Keypad App Help Guide - Arming



## **Burglar Alarm Status**

n the event of an alarm, when the Arming tab is selected, the armed status and background screens are changed to indicate the alarm state.

## All/Perimeter, Home/Away, Home/Sleep/Away Systems

- · The site background and header display red
- Arming shield graphics are shown in red



# Area Systems

- The site background and header display redArming shield graphics are shown in red
- Disarming all areas removes the alarm state graphics